

ProChem® 805

Press Wash

GENERAL DESCRIPTION

ProChem® 805 is best suited for clean-up of plastisol ink. Use this product as a screen opener, as a screen wash when saving the emulsion, and as a press wipe during continuous printing. This product is also an excellent cleaner for the removal of pallet or belt printers' adhesive.

This product can be used in a wide variety of innovative cleaning processes ranging from recirculation machines, dip tanks, or precision immersion cleaning processes. It may also be applied manually by a brush or a hand held sprayer. ProChem® 805 is fast drying and leaves no film or oil residue so that the clean surface is in excellent condition for tape adhesion.

ADVANTAGES

- · High solvency.
- Low odor.
- Mesh safe.
- Emulsion safe.
- Low vapor pressure.
- · High load capacity to reduce usage.
- · Multiple Applications.


<u>APPLICATION</u>

Always card excessive ink from screen. Use one of the following applications.

Quick Tip:

To cut down on the number or rags it takes to clean a screen, use a non absorbent scrub pad to liquify the ink and a squeegee to pull all the ink to one end of the screen and wipe up with one or two rags.

PRESS WASH AND SCREEN OPENER

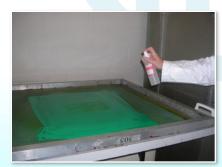

Step 1 . Spray **ProChem® 805** on the squeegee side of screen.



Step 2 . Scrub ink with a non-absorbent pad until liquified.



Step 3. Use rags or towels to wipe up ink residue. Re-apply to clean up ink residue in image area.



RECIRCULATING WASH

Card excessive ink from the screen. **ProChem® 805** can be continuously recirculated until product becomes too heavily soiled with solids. Used product may be filtered and reused.

426D SS

Click here for more details.

SQ-1000

Click here for more details.

Available in:

1 gallon 4 x 1 gallon

5 gallon

55 gallon

ProChem® 805